

## THANK YOU FOR ORDERING


# 42" LIGHTBAR BRACKETS

### DETAILS


- The brackets were chemically cleaned and primed before packaging and are ready for paint straight out of the box!
- Specifically designed for 3rd gen Toyota 4Runners and 1st gen Toyota Tacomas.
- Easily re-bent to fit similar sized light bars.
- The use of waterproof silicon and stainless or galvanized tapping screws are highly recommended.

### INSTALLATION INSTRUCTIONS

You will need:

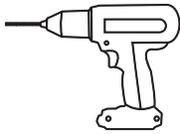


drill and bits

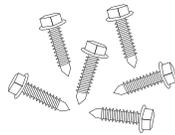

6 self tapping screws (included)



8mm wrench and socket

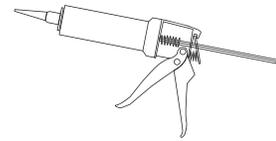

waterproof silicone

#### STEP 1

Open doors and peel back weatherstripping from the pillars.

#### STEP 2

Attach brackets to the end of lightbar.

#### STEP 3

Move up or down along the face of the windshield until both brackets come in contact with pillars. (best to use two people for this step).

#### STEP 4

Make sure brackets are even with each other. (If you don't like the location you can easily re-bend

the brackets to move the mounting location)

#### STEP 5

With brackets aligned mark the hole locations on the A pillars. Then set brackets and lightbar aside.

#### STEP 6

Drill into the hole marks with the self tapping screws. Remove the screws after drilling the holes. (Instead of using the screws for this step you can instead predrill with a smaller drill bit)

#### STEP 7

Apply small amounts of silicone on and around the holes you just drilled.

#### STEP 8

Place brackets over the holes and screw to pillars. (DO NOT OVER TIGHTEN!)

#### STEP 9

Attach the ends of the lightbar to the brackets.

#### STEP 10

Reattach weatherstripping.

ENJOY!